

PARTS LIST

for


KitchenAid®

7 QT. STAND MIXER

PROFESSIONAL – BOWL LIFT

MODELS:


5KSM7591XWH0 (White)
5KSM7591XER0 (Empire Red)
5KSM7591XSM0 (Silver Metallic)

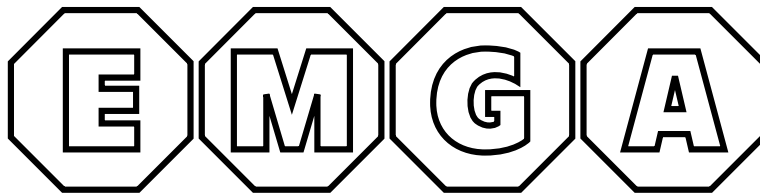

***521.200 - *521.201 - *521.201**

COLOR VARIATION PARTS

For Model: 5KSM7591X

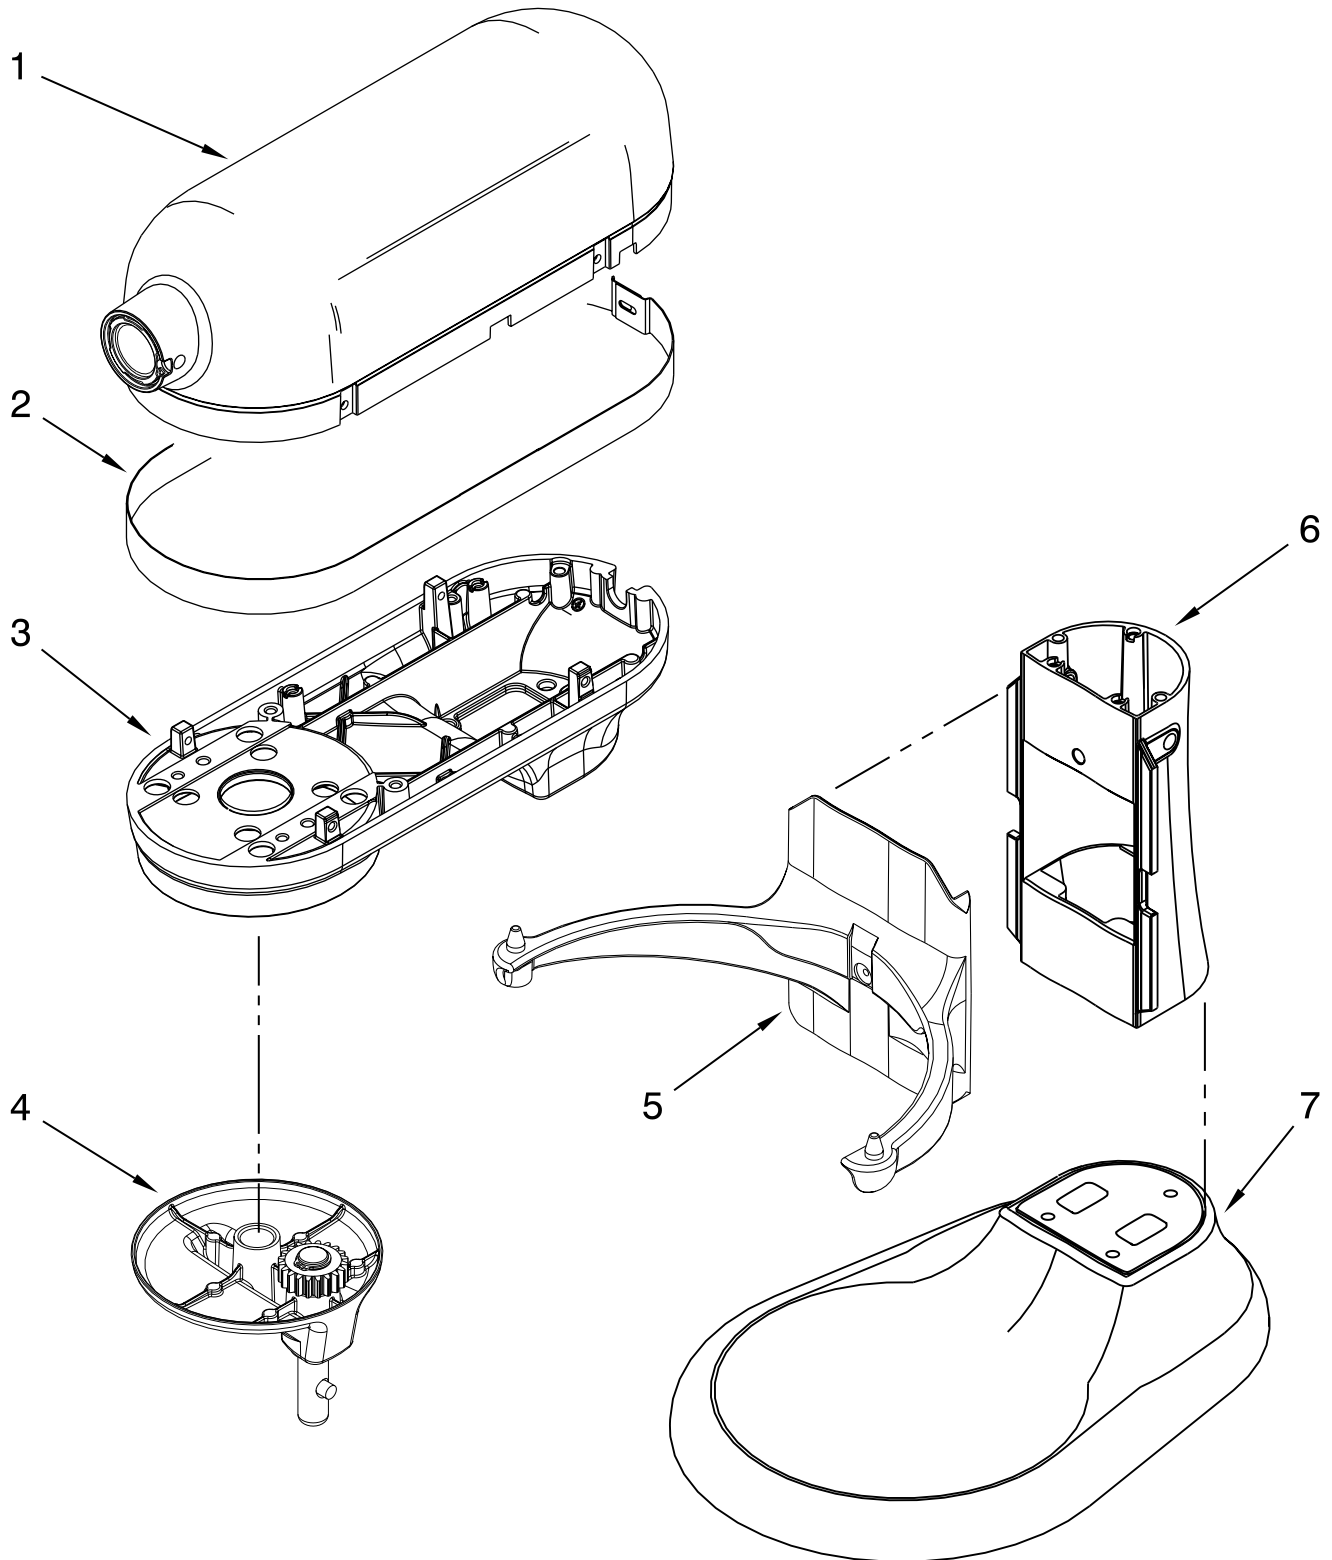

COLOR VARIATION PARTS

For Model: 5KSM7591X


Illus.	Part	
No.	No.	DESCRIPTION

Colors Subject To Change.
Any Color Not Listed is
No Longer Available.
If Additional Colors Are Added,
This Page Will Be Updated.

1		Motor Housing
	9703311	White
	9705300	Empire Red
	W10454049	Silver Metallic
2		Trim Band
	W10419455	Dark Platinum
3		Lower Gearcase
	W10234488	White
	W10410011	Empire Red
	W10450993	Silver Metallic
4		Planetary
	W10419439	White
	W10419442	Empire Red
	W10452357	Silver Metallic
5		Bowl Support and Pins
	9703674	White
	9705360	Empire Red
	W10448648	Silver Metallic
6		Column and Pins
	W10451002	White
	W10451578	Empire Red
	W10451113	Silver Metallic
7		Base & Foot Assembly
	9703690	White
	9705348	Empire Red
	W10448633	Silver Metallic

CASE, GEARING AND PLANETARY UNIT

For Model: 5KSM7591X

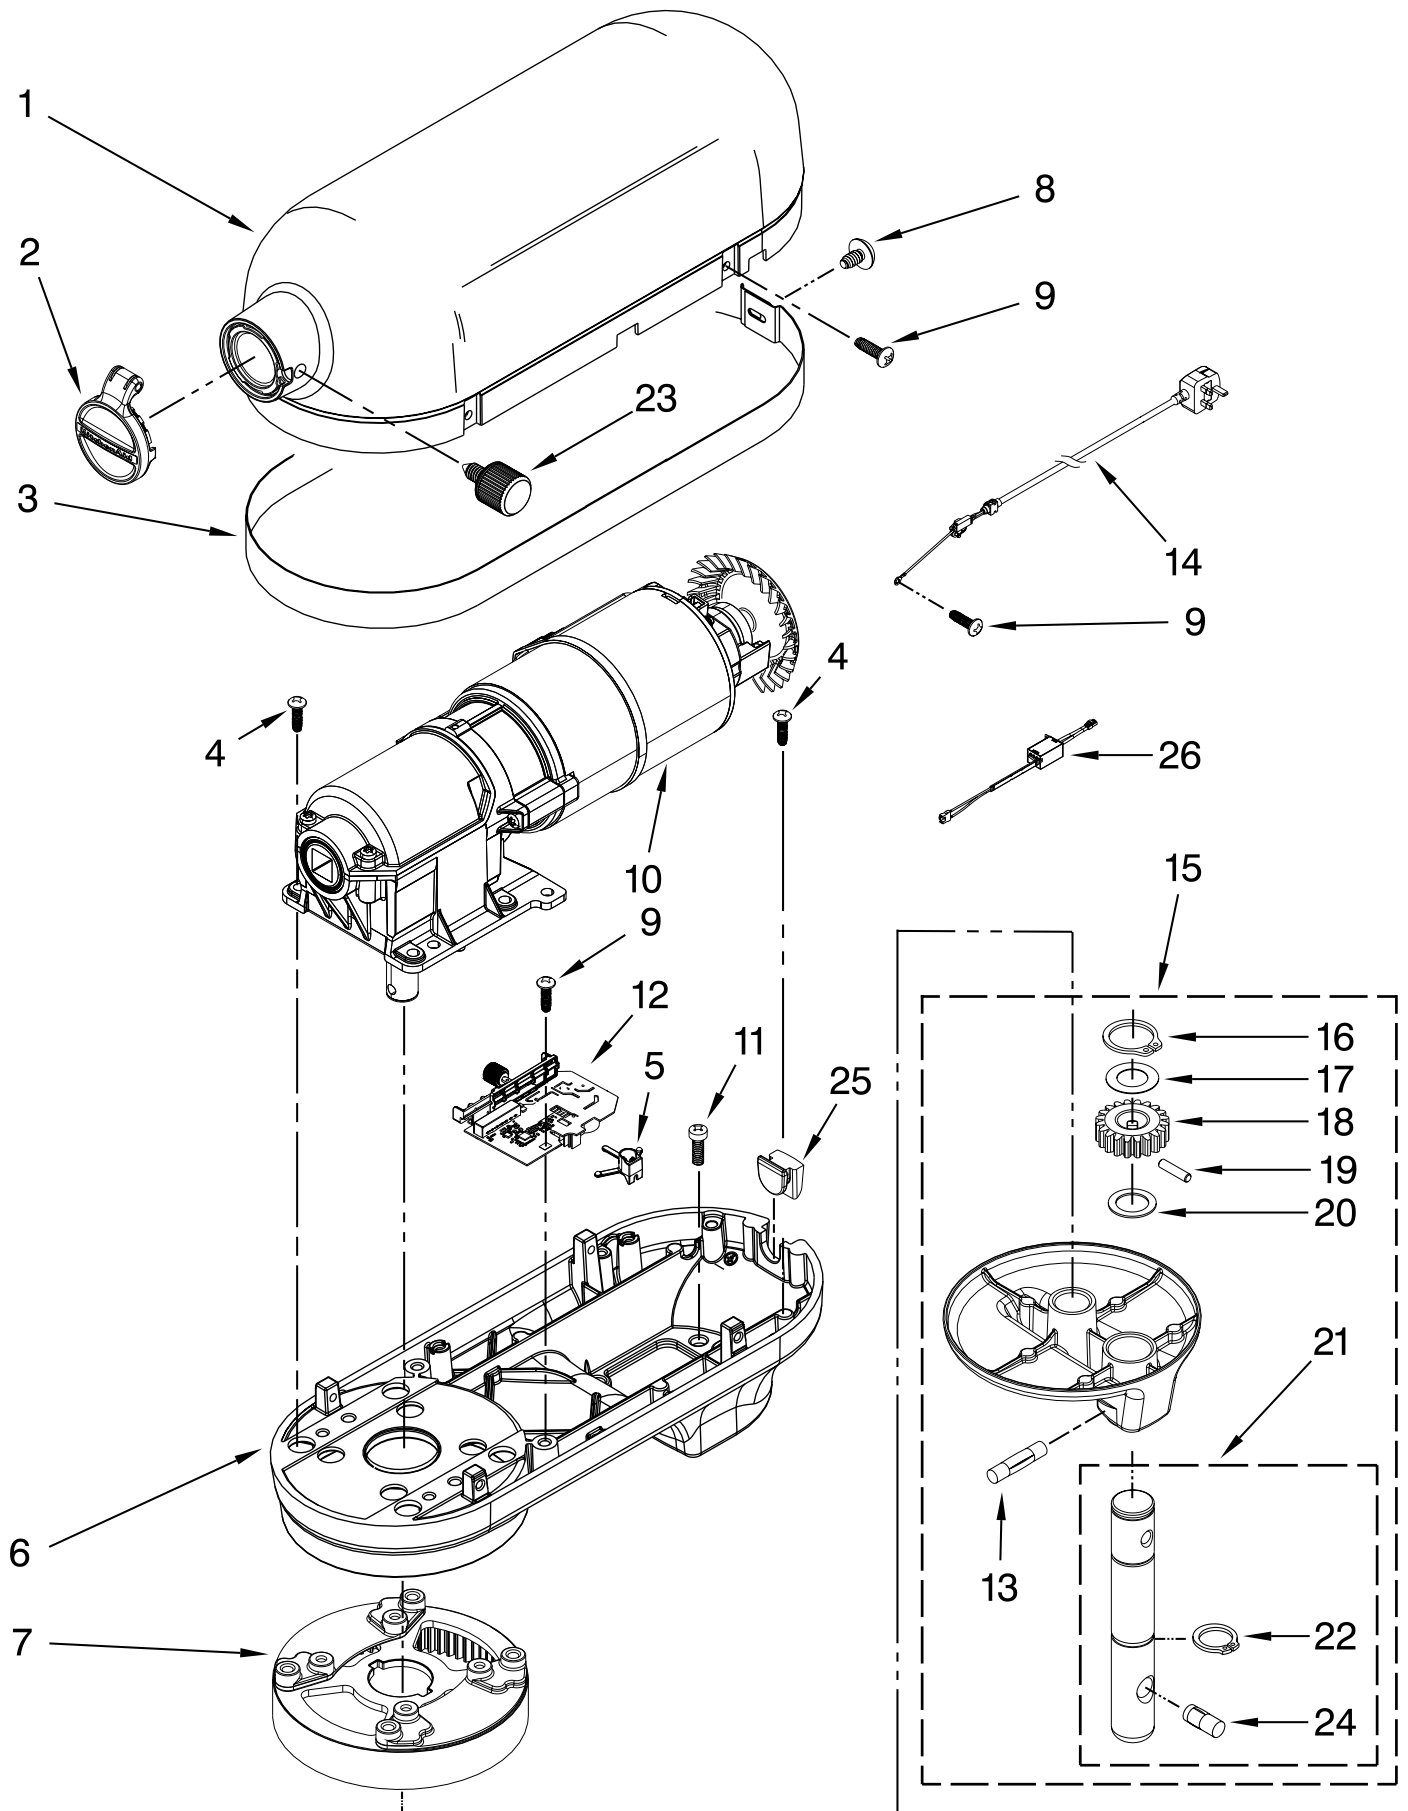

CASE, GEARING AND PLANETARY UNIT


For Model: 5KSM7591X

Illus.	Part	
No.	No.	DESCRIPTION
1	**	Gearcase Motor Housing
2	W10395280	Cap, Attachment Hub, Hinged
3	**	Band, Trim
4	W10351843	Screw
5	W10305968	Holder, Control
6	**	Lower Gearcase
7	W10234493	Gear, Ring & Plate to Planetary
8	3400617	Screw
9	3400814	Screw
10	W10307642	Motor, 230 V Assy w/Transmission
11	3400200	Screw
12	W10388322	Control Assembly
13	W10234531	Pin, Groove
14		Cord, Power
	W10459179	White
	W10419451	Black
15	**	Planetary Assembly
16	9703438	Clip, Retaining
17	9706090	Washer
18	W10234643	Gear, Pinion
19	9707223	Pin, Retaining
20	8533910	Washer
21	W10419438	Shaft, Agitator
22	9703680	Clip, Retaining
23		Thumb Screw
	W10360791	Black
24	9704677	Pin, Groove
25	W10417201	Clip, Plug
26	W10447372	RFI Filter

**Refer To Page 3
Color Variation Parts

BASE AND PEDESTAL UNIT

For Model: 5KSM7591X

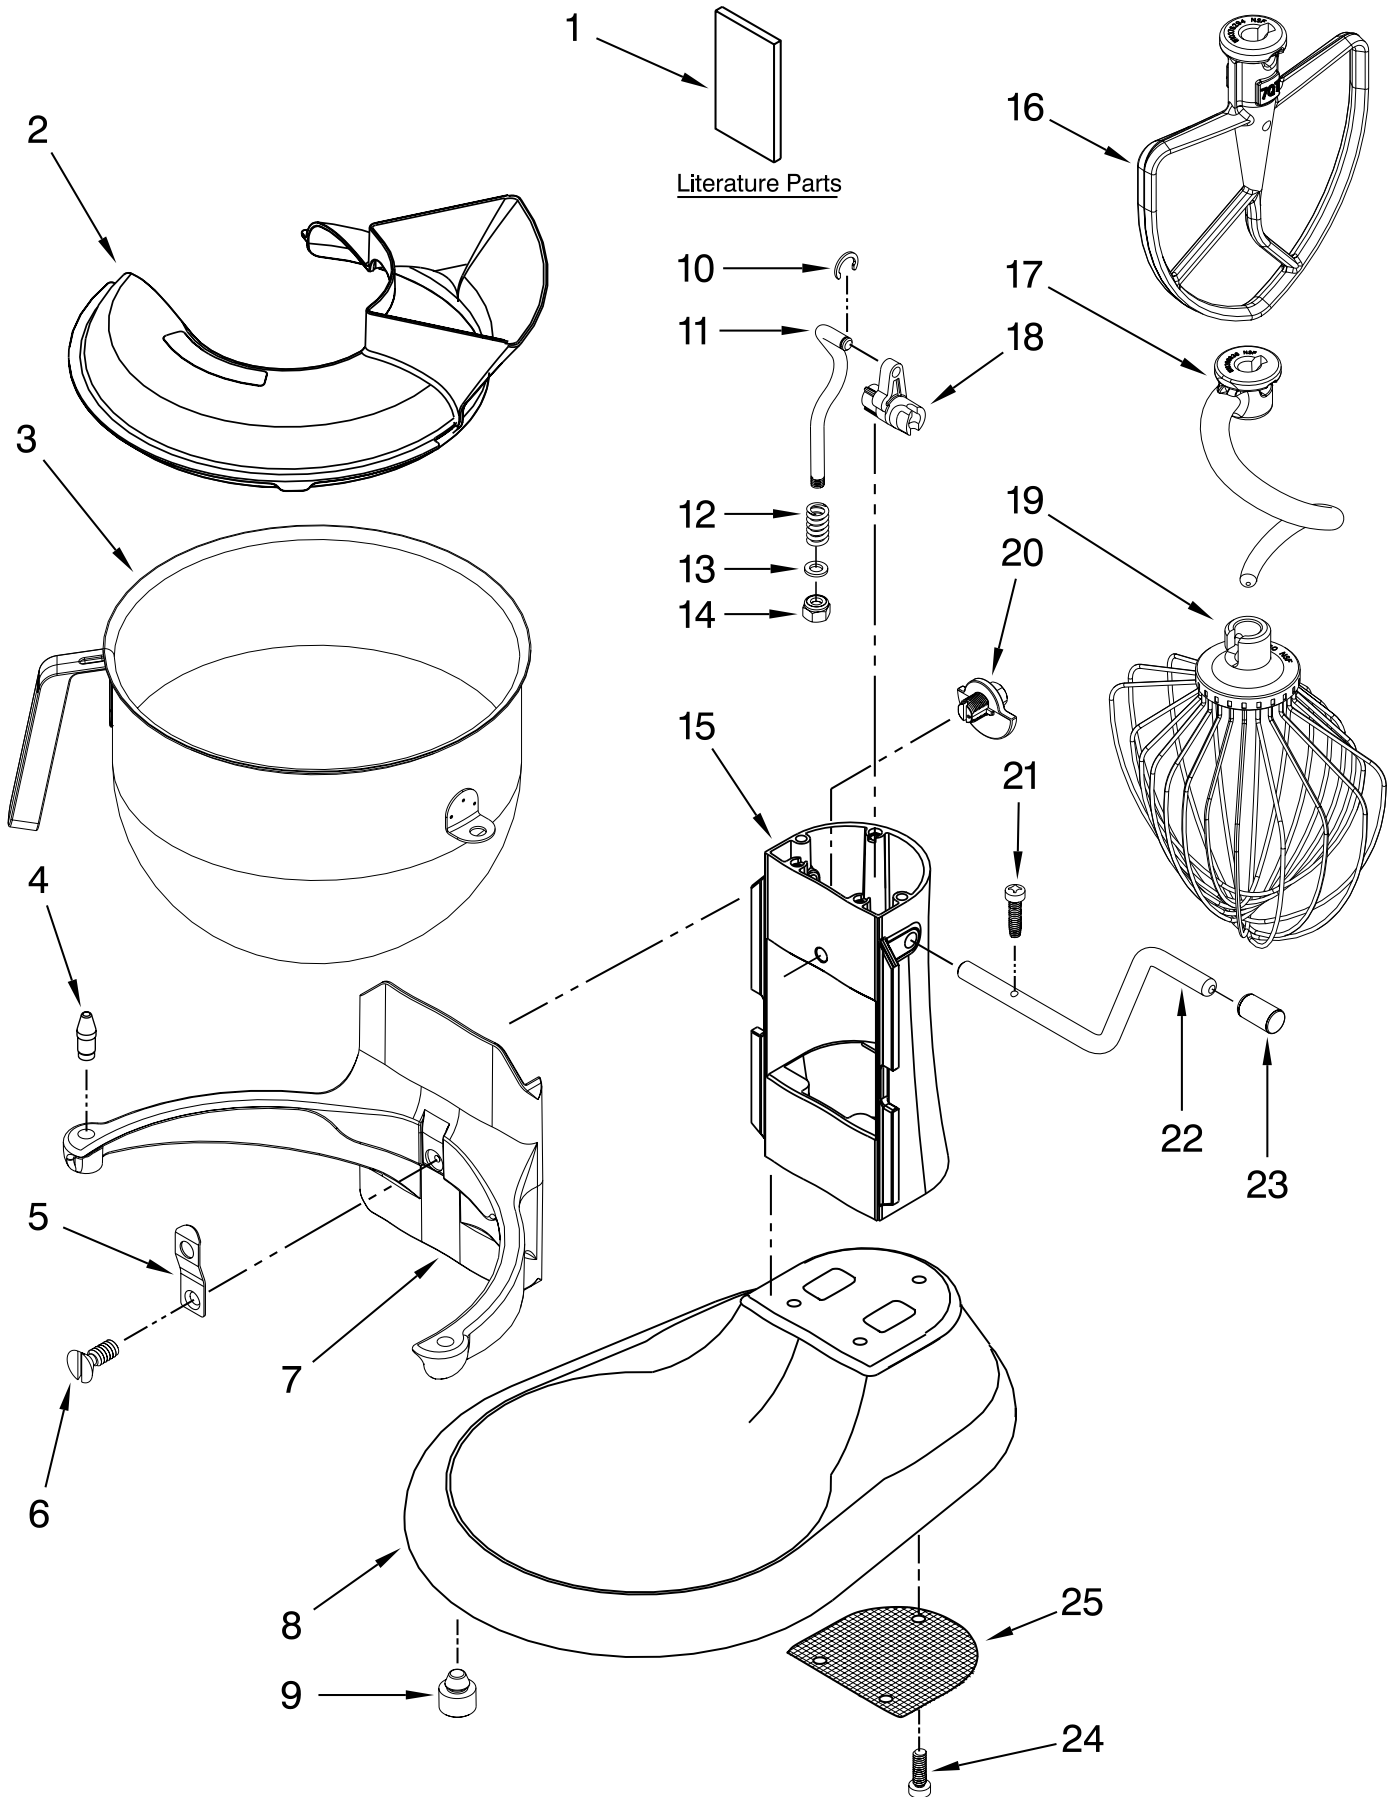

BASE AND PEDESTAL UNIT

For Model: 5KSM7591X

Illus.	Part	
No.	No.	DESCRIPTION
1		Literature Parts
	W10421400	Use & Care Guide
	W10463001	Repair Parts List
2	9709924	Shield, Pouring
3	W10354780	Bowl, 7 Qt.
4	240185	Pin, Bowl Locating
5	9703474	Latch, Bowl Spring
6	3400018	Screw
7	**	Bowl Support
8	**	Base and Foot Assembly
9	9708649	Foot, Rubber
10	9703307	Clip
11	9706787	Rod, Bowl Lift
12	9237	Spring
13	9703439	Washer
14	8533907	Nut
15	**	Column Assembly
16	W10394561	Beater, Flat
17	W10467144	Hook, Dough
18	9706885	Arm, Bowl Lift
19	W10352664	Whip, Wire
20	9703426	Cam, Adjusting
21	3400863	Screw
22	9706788	Handle, Bowl Lift
23	W10391115	Cap, Handle
24	3400200	Screw
25	9706814	Screen, Vent

**Refer To Page 3
Color Variation Parts

ACCESSORY PARTS

For Model: 5KSM7591X

Illus. No.	Part No.	DESCRIPTION
	4164778	Mixer Attachment Pak (Includes Food Grinder (FG-A), Food Strainer (FVSP), And Vegetable Slicer, (RVS-A) (FPP-A)
	4164749	Food Grinder (FG-A)
	4164775	Fruit/Vegetable Strainer Parts (Use With FG-A Model Only) (FVSP)
	4164750	Rotor Slicer/Shredder (With 4 Standard Cones) Fine Shredder, Coarse Shredder, Thick Slicer, And Thin Slicer (RVS-A)
	4164774	Fruit/Vegetable Strainer And Food Grinder (FVS/FG-A)
	241675	Food Tray (FT)
	4164748	Juicer (JE)
	4164803	Sausage Stuffer Kit (SSA)
	4176597	Grease, Planetary
	KPEXTA	Pasta Extruder with 6 Discs