



POPCORN MACHINE

Modelnr.: *537.005



GEBRUIKSAANWIJZING

Lees deze gebruiksaanwijzing zorgvuldig alvorens het apparaat in gebruik te nemen.

1. APPARAATGEGEVENS

Model	PC-G1500
Afmetingen	520x380x670 mm
Voltage	220-240 V, 50/60 Hz
Vermogen	1500 W

2. VEILIGHEIDSVOORSCHRIFTEN

- A** Zorg dat het apparaat solide staat en niet in de directe zon en/of regen.
- B** Sluit het apparaat alleen aan volgens de waarde vermeld op het typeplaatje.

LET OP !!

**NOOIT WATER OP DE HETE PLAAT GIETEN,
DIT KAN ERNSTIGE GEVOLGEN HEBBEN.**

3. GEBRUIK VAN HET APPARAAT

- A** Schakel het apparaat in, de verlichting brandt en de pan zal warm worden.
- B** Na ongeveer 5-7 minuten zal de pan voldoende verwarmd zijn voor gebruik.
- C** Giet 50 ml olie op de plaat en voeg daar 150 gram maïskorrels aan toe samen met 100 gram suiker of zout.
- D** Het zal hoorbaar zijn als de maïskorrels ontpoppen, als dit geluid afneemt zal de popcorn gereed zijn.
- E** Blijf altijd opletten als het apparaat in gebruik is ivm aanbranden van het produkt.

4. ONDERHOUD

- A** Zorg tijdens het onderhoud dat te allen tijde de stroom is afgekoppeld om ongelukken te voorkomen.
- B** Reinig het oppervlak met een vochtige doek niet bijtend reinigingsmiddel.
- C** Gebruik geen harde metalen of borstels.



POPCORN MACHINE

Modelnr.: *537.005



OPERATION MANUAL

Please refer to these instructions before using this machine.

1. BASIC PARAMETER

Model	PC-G1500
Dimensions	520x380x670mm
Power	220~240V / 50~60Hz
Consumption	1500W
Efficiency	3~5Min / Plate
Temperature Range	220°C~260°C

2. TRANSPORTATION AND STORAGE

As all four corners of this machine are made of toughened glass, still be very careful when handling, never put it in upside down position nor shake it violently. Store in a warehouse where is draught and away from corrosive gas. Do not place in open air, but if necessary, please make sure it is not reached by rain or sunshine.

3. SAFETY PRECAUTIONS

- A** The machine should be placed on a stable and upright position away from rain or sunshine.
- B** The supplied voltage must coordinate with the one indicated on the parameter. The margin should be at +-10%.
- C** A proper power switch, fuse, and protecting switch should be installed near the machine. Do not place any object in front of the switch for more convenient operation.
- D** Grounding wire and power cable are from the same line, therefore should be plugged to a three-phase inlet according to safety standards.
- E** Warning: Do not pour water in the popcorn bowl while its working for it may cause serious damages.

4. INSTRUCTIONS

- A** Press the heat preservation and lighting switch for the tube and bulb to start working.
- B** Press the rotating and heating button. After 5-7 mins. of preheating, place 1 piece of popcorn with 5g of oil on the plate, if the corn pops, the preparation is done.
- C** Begin with pouring 50ml of oil in the bowl, then 150g of corn and 100g of sugar for popping. You can hardly hear any popping noises after about 5 minutes, then open the cover and get it out.
- D** Please do not move your attention away while is popping. Close the glass door to prevent corn from dropping out of the case. Stir the bowl until it has finished popping.
- E** Prevent oil from dripping on the plate for it will dirty it and may cause burning during pre-heat.

5. CLEANSING AND MAINTENANCE

- A** Cut off all power before maintenance.
- B** Clean the surface of the machine with a moist cloth. Do not use corrosive cleanser. Do not spray water directly on the machine, or water will drip into electric system and disrupt performance.
- C** Do not use any metal brushes on neither inside or outside of the machine. It will tear off the non-adhesive coating.
- D** If the machine has been idle for a period of time, unplug cable and store is properly.
- E** Please make sure the machine is in good sanitary conditions. Never use it when its dirty, for it will reduce machine life-span.