



MILANTOAST

(GB) PRELIMINARY RECOMMENDATIONS

Unpack the appliance carefully. Keep and use the original packing in case you return the product to the retailer one day. Remove the plastic, the cardboard and the various protections and other accessories. Remove the adhesive plastic film protecting the stainless steel parts before switching the appliance on. In the event of a fault please contact the retailer before use. Children should be kept away from the packing material (foam polystyrene, plastic bags, clips, etc.), as it may be very dangerous for them.

SAFETY STANDARDS: Check that the supply voltage of the grid corresponds to that marked on the rating plate put under the appliance, which must be earthed and whose circuit in compliance with the relevant safety standards. In case the power socket and the plug of the appliance do not correspond, let the socket be removed and changed by an authorized person only. In case you dispose the appliance near walls and partition walls, kitchen furniture, decorative elements, etc., these should be made of antifire material in compliance with the fire prevention standards. Keep a minimum distance of 25 cm. from the surrounding elements and 50 cm from the top. In the event of damage, the power cord (Art. code 7793) should be removed and replaced by an original one from trained personnel only.

USING YOUR TOASTER: This conveyor toaster is ideal to toast slices and bagel by radiant heat. The toasting of coated products such as a garlic bread and cheese sandwiches is not recommended. Any other use of the appliance is improper and dangerous. Use original parts and accessories only. Do not leave the working appliance unattended. Keep children and unauthorized people away from the appliance. Do not use it outdoors and do not expose to damp. Do not soak or sprinkle it in water or any other liquid. Avoid cleaning the appliance with liquids, as it is not waterproof. Do not place anything on top of the toaster. Do not cover the appliance: otherwise, risk of fire!. Disconnect the plug when the appliance is switched off. Disconnect the plug before moving the appliance. Do not tear the power cord or the appliance by disconnecting the plug from the power socket. Avoid any contact between the power cord and the appliance. Risk of burn! .Cool the appliance off before moving it.

First Use or Reuse of the Appliance after a long Period of Idleness

1. Use (he appliance in airy Spois.
2. Check position of crumb tray (5) and toast collector (7).
3. Connect the power plug with the socket
4. Select the lighting switches.
5. Set speed (2), top heating (3), bottom heating (4).
6. On for about 40 minutes.

How to Use Your Conveyor Toaster Warning:

The thickness of bread to be put in the heating chamber should not exceed 3,5 cm (1¼ in.) for mod 18050 and 1,7 cm (¾, in.) for 18000.

1. Check position of crumb tray (5) and toast collector (7).
2. Connect the power plug with the socket.
3. Turn the lighting switches on.
4. Set speed (2), top heating (3), bottom heating (4) to medium position.
5. Load up.
 - mod 18000 put the slices bread on the conveyor belt in load up area (6)
 - the model 18050 the conveyor feeder guide can be used in two position.

When in the upright position, the toaster is set for automatic feed. Bread slices enter the toaster simply by placing them on the feeder guide and rekasing. For manual feeding of bread, tip the feeder guide until it rests on top of the toaster. In this position, slices can be manually loaded by placing them directly on the conveyor belt.

6. output / discharge the model 18000 the output is on rear of the toaster. The unloading chut (7) can be used in two position as shown in figure. the model 18050 can be set up 50 the bread discharges at the either the front or rear of the unit. For front discharges, install the toast collector (7) in the front of the unit as shown in figure. Place the back panel (8) as shown in figure. For rear discharge, install the toast collector (7) and the back panel (8) on the rear and as shown in figure.

Conveyor toaster -Recommendations for use

Allow approximately 15 minutes for a warm up period.

The time necessary to reach the right bread and food cooking point depends on several factors: quality, freshness, thickness, shape, food and stuffed food temperature. The right cooking point can be reached after several tests, also considering that:

- when the appliance is cold, cooking time should be increased;
- food cooked in this appliance can be very hot - handle with care.
- don't block cool air flow gates on rear and bottom.

CLEANING: Disconnect the power plug before cleaning the appliance. Cool the appliance off before cleaning or moving it. Clean the appliances externally with a damp cloth or special products for stainless steel. Take the crumb tray periodically out (5) and clean it with a damp cloth. On the toaster mod 18050, the toast crumb tray can be easily be removed by sliding it out from the front of the unit. On the toaster mod 18000 it's on the back of the unit.

MAINTENANCE: No parts can be repaired by the user. Your retailer will be able to provide all suitable tooling and equipment to repair this appliance, together with the original spare parts.