



*921.551 - *921.552 **CHOCOLATE WARMER - MANUAL**

MANUAL MAXPRO CHOCOLATE WARMER

1, AND 2 POTS

Advise for a proper and safe use of the Maxpro Foodwarmer

- * Take the machine out of the box and put the plug in a grounded power point of the right voltage (220/230 Volts)
- * Place the machine with as much as possible free space around the machine because of heat transmission.
- * Take care that the machine will not be overloaded and that the machine is switched off after every use.

Maintenance and Cleaning

- * Always first take out the plug from the power point.
- * Use a moist cloth and nota soaked cloth.
- * Do not use aggressive detergents.
- * Be very careful with moist around the switches and electrical parts.
- * Never place the machine under a tap or for example in a dishwasher.

Attention

It must be used as a “BAIN MARIE”, this means that the food insert pan is heated by water which is in the water pan. The warm water is the conductor for the S/S pan.

Using the machine

- * Fill the water pan with enough water to make sure that it reaches the food insert pan. (approximately 0,5 lit.)
- * Put the plug in a grounded power point.
- * Turn the switch to the desired temperature.
- * Regularly change the water in the water pan for hygiene reasons.
- * Always take out the plug from the power point when refilling or doing maintenance or cleaning.

Emga International B.V., P.O. box 32
3640 AA Mijdrecht, the Netherlands
Fax: 00-31-(0)297-287709
E-mail: info@emga.com