

537.005 **POPCORN MACHINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-PCG1500-001	TOP LID	4
2	Z-PCG1500-002	TOP LAP	1
3	Z-PCG1500-003	MOTOR	1
4	Z-PCG1500-004	CONNECTOR	1
5	Z-PCG1500-005	LIGHT HOUSING	1
6	Z-PCG1500-006	BACK GLASS	1
7	Z-PCG1500-007	HANGER 1	1
8	Z-PCG1500-008	BRACKET	1
9	Z-PCG1500-009	FLANK GLASS	2
10	Z-PCG1500-010	COLUMNS	3
11	Z-PCG1500-011	CLAMP BOARD	1
12	Z-PCG1500-012	CLAMP BOARD	4
13	Z-PCG1500-013	HEATING TUBE 200W	1
14	Z-PCG1500-014	CONNECTOR	1
15	Z-PCG1500-015	POWER CORD	1
16	Z-PCG1500-016	BOX VERTICAL BOARD	1
17	Z-PCG1500-017	BOX VOVER BOARD	1
18	Z-PCG1500-018	LOWER BOARD	1
19	Z-PCG1500-019	FRONT BOARD	1
20	Z-PCG1500-020	DOOR GLASS	1
21	Z-PCG1500-021	MIXER DEVICE	1
22	Z-PCG1500-022	HANGER	1
23	Z-PCG1500-023	LID	1
24	Z-PCG1500-024	MAGNETIC PLASTER	1
25	Z-PCG1500-025	SWITCH	1
26	Z-PCG1500-026	POWER SWITCH	1



537.005 **POPCORN MACHINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
27	Z-PCG1500-027	COVER BOARD	1
28	Z-PCG1500-028	LIGHT BULB	1
29	Z-PCG1500-029	THERMOSTAT	1
30	Z-PCG1500-030	QUALIFICATION	1
31	Z-PCG1500-031	BOARD CLAMP	1
32	Z-PCG1500-032	BRACKET	1
33	Z-PCG1500-033	CAM	1
34	Z-PCG1500-034	TIE-IN	1
35	Z-PCG1500-035	SPRING	1
36	Z-PCG1500-036	CABLE	1
37	Z-PCG1500-037	JACKET	1
38	Z-PCG1500-038	HANDLE	1
39	Z-PCG1500-039	SURROUND	1
40	Z-PCG1500-040	BRACKET	1
41	Z-PCG1500-041	PRESS BOARD	2
42	Z-PCG1500-042	CONNECTION	1
43	Z-PCG1500-043	HEATING TUBE	1
44	Z-PCG1500-044	SALVER	1
45	Z-PCG1500-045	THERMOSTAT	1
46	Z-PCG1500-A03		1
47	Z-PCG1500-A04		1