



## 688.082 CRÊPESBAKAPPARAAT - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-EC-001	SCREW	
2	Z-EC-002	RUBBER FEET	
3	Z-EC-003	LOWER SIDE PLATES	
4	Z-EC-004-01	UPPER BOTTOM PLATE (EC01)	
5	Z-EC-005	THERMOSTAT WITH KNOB	
6	Z-EC-006	INDICATOR	
7	Z-EC-007-01	RESIDUE TRAY (EC01)	
8	Z-EC-008-01	TOP PLATE (EC01)	
9	Z-EC-009	SCREW	
10	Z-EC-010	HEAT ELEMENT FIXTURE	
11	Z-EC-011	HEATING ELEMENT	
12	Z-EC-012	COOKING PLATE	
13	Z-EC-013	POWER CORD	
14	Z-EC-014	COOKING RAKE	