

537.005 **POPCORN MACHINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	QTY
1	Z-PCG1500-001	Top Lid	4
2	Z-PCG1500-002	Top Lap	1
3	Z-PCG1500-003	Motor 220V/25W	1
4	Z-PCG1500-004	Connector	1
5	Z-PCG1500-005	Light Housing	1
6	Z-PCG1500-006	Back Glass	1
7	Z-PCG1500-007	Hanger 1	1
8	Z-PCG1500-008	Bracket	1
9	Z-PCG1500-009	Flank Glass	2
10	Z-PCG1500-010	Columns	3
11	Z-PCG1500-011	Clamp Board	1
12	Z-PCG1500-012	Clamp Board	4
13	Z-PCG1500-013	Heating Tube 230V/200W	1
14	Z-PCG1500-014	Connector	1
15	Z-PCG1500-015	Power Cord	1
16	Z-PCG1500-016	Box Vertical Board	1
17	Z-PCG1500-017	Box Vover Board	1
18	Z-PCG1500-018	Lower Board	1
19	Z-PCG1500-019	Front Board	1
20	Z-PCG1500-020	Door Glass-Left	1
20	Z-PCG1500-020-1	Door Glass-Right	1
21	Z-PCG1500-021	Mixer Device	1
22	Z-PCG1500-022	Hanger	1
23	Z-PCG1500-023	Lid	1
24	Z-PCG1500-024	Magnetic Plaster	1
25	Z-PCG1500-025	Switch	1
26	Z-PCG1500-026	Power Switch	1
27	Z-PCG1500-027	Cover Board	1
28	Z-PCG1500-028	Light Bulb 220V/100W	1

537.005 **POPCORN MACHINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	QTY
29	Z-PCG1500-029	Thermostat 65°C	1
30	Z-PCG1500-030	Temperature Limiter	1
31	Z-PCG1500-031	Board Clamp	1
32	Z-PCG1500-032	Bracket	1
33	Z-PCG1500-033	Cam	1
34	Z-PCG1500-034	Tie-In	1
35	Z-PCG1500-035	Spring	1
36	Z-PCG1500-036	Cable	1
37	Z-PCG1500-037	Jacket	1
38	Z-PCG1500-038	Handle	1
39	Z-PCG1500-039	Surround	1
40	Z-PCG1500-040	Bracket	1
41	Z-PCG1500-041	Press Board	2
42	Z-PCG1500-042	Connection	1
43	Z-PCG1500-043	Heating Element 230V/1200W	1
44	Z-PCG1500-044	Salver	1
45	Z-PCG1500-045	Thermostat 220°C	1
-	Z-PCG1500-015-1	Power Cord Jacket	1
-	Z-PCG1500-032-1	Pin For Hold	1
-	Z-PCG1500-034-1	Bolts And Tuns For Part Grip No.34	1
-	Z-PCG1500-034-2	Bolts For Part Grip No.34	1
-	Z-PCG1500-A01	Rear Glass Sticker	1
-	Z-PCG1500-A02	Pot Set (S/S)	1
-	Z-PCG1500-A02A	Pot Set (Normal)	1
46	Z-PCG1500-A03	Pin	1
47	Z-PCG1500-A04	Crumb Tray	1
-	Z-PCG1500-A09	Bolts For The Maching Top	1
-	Z-PCG1500-A10	Bolts To Tighten The Piece 33 With Part 38	1