



680.100 **SANDWICH TOASTER** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-AT-001	TERMINAL	1
2	Z-AT-002	BOTTOM BOARD	1
3	Z-AT-003	RUBBER FOOT	4
4	Z-AT-004	LOWER INSULATION BOARD	1
5	Z-AT-005	TIMER KNOB	1
6	Z-AT-006	HANDLE	1
7	Z-AT-007	CRISPER TRAY	1
8	Z-AT-008	SWITCH KNOB	1
9	Z-AT-009	DIAL	1
10	Z-AT-010	SWITCH	1
11	Z-AT-011	SAFEGUARD A FOR HEATING	1
12	Z-AT-012	GRID	1
13	Z-AT-013	SAFEGUARD B FOR HEATING	1
14	Z-AT-014	SIDE BOARD	1
15	Z-AT-015	SIDE INSULATION BOARD	2
16	Z-AT-016	UPPER INSULATION BOARD	1
17	Z-AT-017	TOP BOARD	1
18	Z-AT-018B	SHELL ASSEMBLY FOR AT-370	1
19	Z-AT-019B	HEATING ELEMENT FOR AT-370	4
20	Z-AT-020	CERAMIC BALL (UPPER)	16
20	Z-AT-020-1	CERAMIC BALL(BOTTOM)	16
21	Z-AT-021	POWER CORD JACKET	1
22	Z-AT-022	POWER CORD	1
23	Z-AT-023	TIMER 15MIN	1
24	Z-AT-024	DIAL FOR TIMER KNOB	1