

***680.118 CONTACT SANDWICH TOASTER - SPARE PART LIST**

NO	CODE	DESCRIPTION	Q'TY
1	ZBC600-3121	Handle	1
2	ZBC600-3122	Upper Module Cover	2
3	ZBC600-3123	Fixed Bar	2
4	ZBC600-3124	Heating Tube Plate	2
5	ZBC600-3125	Terminal Block	1
6	ZBC600-3126	Upper Heating 850W	1
7~8	ZBC600-3127Z	Upper+Lower Module Plate	1
9	ZBC600-3129	Lower Heating 900W	1
10	ZBC600-31210	Lower Module Cover	2
11	ZBC600-31211	Bottom	1
12	ZBC600-31212	Foot	2
13	ZBC600-31213	Indicator Lamp-Yellow	2
14	ZBC600-31214	Switch	1
15	ZBC600-31215	Knob Of Thermostat	1
16	ZBC600-31216	Bezel Of Thermostat	1
17	ZBC600-31217	Knob Of Timer	1
18	ZBC600-31218	Timer 5Min	1
19	ZBC600-31219	Bottom Sealing Plate	1
20	ZBC600-31220	Power Cord	1
21	ZBC600-31221	Power Cord Jacket	1
22	ZBC600-31222	Line Pipe	1
23	ZBC600-31223	Temperature Limiter 340°C	1
24	ZBC600-31224	Fixed Strip	1
25	ZBC600-31225	Thermostat 300°C	1