

## \*688.014 **TOASTER** - SPARE PART LIST

<b>NO</b>	<b>CODE</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>
1	ZCE140-1361	Shell-Side Plate	1
2	ZCE140-1362	Weldments	1
3	ZCE140-1363	Body	1
4	ZCE140-1364	Heater 360W	2
	ZCE140-1364-1	Heater 300W	3
5	ZCE140-1365	Inner-Left Partition	1
6	ZCE140-1366	Inner-Left Side Plate	1
7	ZCE140-1367	Transom	2
8	ZCE140-1368	Projectile	1
9	ZCE140-1369	Projectile Handle +Ball	1
10	ZCE140-13610	Connecting Piece	1
11	ZCE140-13611	Inner-Front Side Plate	1
12	ZCE140-13612	Inner-Partition	1
13	ZCE140-13613	Foot	4
14	ZCE140-13614	Bottom Plate	1
15	ZCE140-13615	Press Plate	1
16	ZCE140-13616	Tray	1
17	ZCE140-13617	Inner-Right Partition	1
18	ZCE140-13618	Binding Post	1
19	ZCE140-13619	Clip	1
20	ZCE140-13620	Inner-Right Side Plate	1
21	ZCE140-13621	Separated Mesh	12
22	ZCE140-13622	Plate	1
23	ZCE140-13623	Inner-Side Plate	1
24	ZCE140-13624	Timer With Knob	1
25	ZCE140-13625	Indicator Light	1
26	ZCE140-13626	Switch	1
	ZCE140-136-A03	Power Cord	1