



# \*688.015 FISH/DOUGH PASTRY FRYER SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZCE700-47701	Knob With Bezel	1
2	ZCE700-47702	Thermostat (China)	1
3	ZCE700-47703	Electrical Parts Box	1
4	ZCE700-47704	Heating Indicator	1
5	ZCE700-47705	Power Indicator	1
6	ZCE700-47706	Temperature Limited	1
7	ZCE700-47707	Power Cord	1
8	ZCE700-47708	Black Plate of Electric Box	1
9	ZCE700-47709	Fixed Pin	2
10	ZCE700-47710	Terminal Block	1
11	ZCE700-47711	Micro Switch	1
12	ZCE700-47712	Heating Element Clip	1
13	ZCE700-47713	Heat Element Board	1
14	ZCE700-47714	Oil Filter Plate	1
15	ZCE700-47715	Bottom Box	1
16	ZCE700-47716	Foot	4
17	ZCE700-47717	Cover for Oil Pot	1
18	ZCE700-47718	Fryer Basket	1
19	ZCE700-47719	Heating Element Supports	1
20	ZCE700-47720	Heating Element Press plate	1
21	ZCE700-47721	Heating Element	1
22	ZCE700-47722	Fried Network Bracket	1
23	ZCE700-47723	Drainage Hose	1
24	ZCE700-47724	Handle of Cover	1
25	ZCE700-47725A	Oil Tank(#304)	1