

688.090 PERCOLATOR - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZBC290-100A1	Lid Handle	1
2+4	ZBC290-100A2Z	Lifting Handles	2
5	ZBC290-100A5	Inner Tank (Irreplaceable)	1
6	ZBC290-100A6	Water Gauge Cap	1
7	ZBC290-100A7	Water Gauge Cover	1
8	ZBC290-100A8	Gauge Fixer	1
9	ZBC290-100A9	Screw	1
11.12.13.14. 16.18	ZBC290-100A11Z	Water Tap	1
11	ZBC290-100A11	Tap Handle	1
12	ZBC290-100A12	Tap Cover	1
13	ZBC290-100A13	Tap Spring	1
14	ZBC290-100A14	Tap Tie Bar	1
15	ZBC290-100A15	Pc Water Gauge	1
16	ZBC290-100A16	Tap Core	1
17	ZBC290-100A17	Tap Gasket	1
18	ZBC290-100A18	Tap Body	1
19. 20	ZBC290-100A19Z	Water Tap Silicone Circle & Nut	1
21	ZBC290-100A21	Lid	1
22	ZBC290-100A22	Screw	4
23	ZBC290-100A23	Screw	3
24	ZBC290-100A24	Coffee Filter	1
25	ZBC290-100A25	Tube	1
26	ZBC290-100A26	Screw	4
27	ZBC290-100A27	Fixed Section (Irreplaceable)	1
28	ZBC290-100A28	Indicator Lights (red)	1
29	ZBC290-100A29	Indicator Lights (yellow)	1
30	ZBC290-100A30	ON/OFF Switch	1
31	ZBC290-100A31	Screw	1
32	ZBC290-100A32	Hoop Of Heating Element	1



688.090 PERCOLATOR - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
33	ZBC290-100A33	Bottom Plate(Irreplaceable)	1
34	ZBC290-100A34	88°C Automatic Thermostat	1
35	ZBC290-100A35	Feet Bracket (Irreplaceable)	3
36	ZBC290-100A36	Sealed Circle For Heating Element	1
37	ZBC290-100A37	Heating Element 950W	1
38	ZBC290-100A38	Fixed Piece Of Fuse	1
39	ZBC290-100A39	160°C Anti-Dry Thermostat	1
40	ZBC290-100A40-1	Fuse	1
	ZBC290-100A40	Inner Wires (With Fuse)	1
41	ZBC290-100A41	Base	1
42	ZBC290-100A42	Screw	3
43	ZBC290-100A43	Power cord	1