

## 688.190 WATER BOILER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZBC290-106A1	Lid Handle	1
2.3	ZBC290-106A2Z	Lid Lock	2
4	ZBC290-106A4	Lifting Handle	1
5	ZBC290-106A5	Inner Tank (irreplaceable)	1
6	ZBC290-106A6	Water Gauge Cap	1
7	ZBC290-106A7	Water Gauge Cover	1
8	ZBC290-106A8	Gauge Fixer	1
9	ZBC290-106A9	Screw	1
12.13.14.15. 17.19	ZBC290-106A12Z	Water Tap	1
12	ZBC290-106A12	Tap Handle	1
13	ZBC290-106A13	Tap Cover	1
14	ZBC290-106A14	Tap Spring	1
15	ZBC290-106A15	Tap Tie Bar	1
16	ZBC290-106A16	Pc Water Gauge	1
17	ZBC290-106A17	Tap Core	1
18	ZBC290-106A18	Tap Gasket	1
19	ZBC290-106A19	Tap Body	1
20.21	ZBC290-106A20Z	Tap Seal Ring & Screw	1
22	ZBC290-106A22	Slicone Cap	1
23	ZBC290-106A23	Lid	1
24	ZBC290-106A24	Screw	4
25	ZBC290-106A25	Screw	3
26	ZBC290-106A26	Screw	4
27	ZBC290-106A27	Fixed Section (irreplaceable)	1
28	ZBC290-106A28	Indicator Light-Red	1
29	ZBC290-106A29	Indicator Light-Yellow	1
30	ZBC290-106A30	On/Off Switch	1
31	ZBC290-106A31	Bottom Plate(irreplaceable)	1
32	ZBC290-106A32	"Heating Element (irreplaceable)	1



## 688.190 WATER BOILER - SPARE PART LIST

<b>NO</b>	<b>CODE</b>	<b>DESCRIPTION</b>	<b>Q'TY</b>
33	ZBC290-106A33	94°C Thermostat	1
34	ZBC290-106A34	Screw	2
35	ZBC290-106A35	Feet Bracket(irreplaceable)	3
36	ZBC290-106A36	130°C Manual Thermostat	1
37	ZBC290-106A37-1	Fuse	1
	ZBC290-106A37	Inner Wires (With Fuse)	1
38	ZBC290-106A38	Silicone	1
39	ZBC290-106A39	Screw	1
40	ZBC290-106A40	Reset Button	1
41	ZBC290-106A41	Base	1
42	ZBC290-106A42	Screw	3
43	ZBC290-106A43	Power cord	1