

688.217 MICROWAVE OVEN - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
#N/A	ZCE400-1061	PROGRAMMABLE USB	1
C00	ZCE400-1062	CONTROL PANEL ASS'Y (WITHOUT PCB)	1
C03	ZCE400-1063	PLASTIC DECO. C/PANEL *UPPER	1
C02	ZCE400-1064	LATCH	1
C01	ZCE400-1065	ASS'Y DOOR FRAME	1
C04	ZCE400-1066	DECO. C/PANEL *LOWER	1
C72	ZCE400-1067		1
L00	ZCE400-1068	ASS'Y INTERLOCK	1
L08	ZCE400-1069	LEVER *LOWER	1
L01	ZCE400-10610	LATCH BOARD	1
L04	ZCE400-10611	MICROSWITCH MONITOR	2
L03	ZCE400-10612	MICROSWITCH INTERLOCK	3
L09	ZCE400-10613	LEVER LATCH BOARD	1
L07	ZCE400-10614	LEVER *UPPER	1
D03	ZCE400-10615	LATCH SPRING	1
R10	ZCE400-10616	BACK COVER	1
E05	ZCE400-10617	H.V.TRANSFORMER	2
W20	ZCE400-10618	METAL WIND GUIDE COVER	1
L05	ZCE400-10619	MAIN WIRE HARNESS	1
E04	ZCE400-10620	ASS'Y LAMP	1
Y38	ZCE400-10621	MOTOR COVER	2
W00-L	ZCE400-10622	ASS'Y FAN LEFT	1
F14	ZCE400-10623	PLASTIC SUPPORTOR	1
T48	ZCE400-10624	ASS'Y STIRRER FAN UPPER	1
T49	ZCE400-10625	ASS'Y STIRRER FAN BOTTOM	1



688.217 MICROWAVE OVEN - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
W00-R	ZCE400-10626	ASS'Y FAN RIGHT	1
Z01	ZCE400-10627	H.V.C HOLDER	2
A10	ZCE400-10628	WAVE GUIDE	1
Z15	ZCE400-10629	LAMP COVER	1
A00	ZCE400-10630	ASS'Y CAVITY	1
E44	ZCE400-10631	THERMOSTAT 120/0 *V	1
E37	ZCE400-10632	THERMOSTAT 150/90°C *V	2
E16	ZCE400-10633	POWER CORD	1