



# 721.100 FRENCH FRY CUTTER - PART LIST

LETTER	PART #	DESCRIPTION	Q'TY
A	369211	Thumb screw	
B	0304	Knob	
C	379064	Bridge casting	
D	15112	Blade assembly, 7/32" (scalloped blade)	
	15113	Blade assembly, 1/4" (scalloped blade)	
	15115	Blade assembly, 3/16" (scalloped blade)	
	15114	Blade assembly, 3/8" (scalloped blade)	
	15206	Blade assembly, 7/32" (straight blade)	
	15207	Blade assembly, 1/4" (straight blade)	
	15209	Blade assembly, 3/16" (straight blade)	
	15208	Blade assembly, 3/8" (straight blade)	
E	379069	Pusher head assembly bolt	
F	379070	Pusher head assembly (complete) 7/32"	
	379071	Pusher head assembly (complete) 1/4"	
	379072	Pusher head assembly (complete) 3/16" & 3/8"	
G	379073	Shoulder bolt	
H	379074	Handle assembly	
I	379075	Guide rod (long)	
J	379076	Table top	
K	379049	RUBBER washer - guide rod	
L	379077	Guide rod (short)	
M	353	Nut - guide rod	
N	2319	Rubber foot	
O	379079	Base	
Not Shown	379065	Guard	