



921.510 CHOCOLATE WARMER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
8	ZBC160-1071	Heat Pipes	1
3	ZBC160-1072	Circuit Board	1
4	ZBC160-1073	Sticker	1
9	ZBC160-1074	Sensor	1
5	ZBC160-1075	Switch	1
-	ZBC160-1076	Power Cord	1
6	ZBC160-1077	Power Socket	1
-	ZBC160-1078	Fuse	1
1	ZBC160-1079	Foot	4
2	ZBC160-10910	Bottom Plate	1
7	ZBC160-10911	Housing	1