

921.530 CHOCOLATE WARMER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1.1~1.11	ZBC160-104A1	Main Body	1
1.1	ZBC160-104A1.1	Shell	1
1.2	ZBC160-104A1.2	Aluminum Plate	1
1.3	ZBC160-104A1.3	Holder	1
1.4	ZBC160-104A1.4	Probe	1
1.5	ZBC160-104A1.5	Hot Plate 40W	1
1.6	ZBC160-104A1.6	Bottom Cover	1
1.7	ZBC160-104A1.7	Rubber Foot	4
1.8	ZBC160-104A1.8	Power Switch	1
1.9	ZBC160-104A1.9	Control Knob	1
1.10	ZBC160-104A1.10	Thermostat 30~80°C	1
1.11	ZBC160-104A1.11	Power Socket	1
2.1~2.4	ZBC160-104A2	"Pot Set (Pot+Lid+Handle) *Material: Aluminum-Non- Stick Coating Pot"	1
-	ZBC160-104A-A01	Fuse	1
-	ZBC160-104A-A02	Power Cord	1