














 


Machine	Explode	Code	Description
CF231 Waring Panini Grill Double	1		Pivot Bracket Screw (4 Required)
CF231 Waring Panini Grill Double	2		Pivot Bracket (2 Required)
CF231 Waring Panini Grill Double	3		Set Screw (2 Required)
CF231 Waring Panini Grill Double	4		Control Knob
CF231 Waring Panini Grill Double	5		Drip Tray
CF231 Waring Panini Grill Double	6		Foot (4 Required)
CF231 Waring Panini Grill Double	7		Foot Screw (4 Required)
CF231 Waring Panini Grill Double	8		On-Off Switch
CF231 Waring Panini Grill Double	9		Indicator Light
CF231 Waring Panini Grill Double	10	AD216	Thermostat
CF231 Waring Panini Grill Double	11		Screw for Thermostat (2 Required)
CF231 Waring Panini Grill Double	12		Cover
CF231 Waring Panini Grill Double	13		Washer (4 Required)
CF231 Waring Panini Grill Double	14		Screw (4 Required)
CF231 Waring Panini Grill Double	15		Hex Head Bolt
CF231 Waring Panini Grill Double	16		Washer (4 Required)
CF231 Waring Panini Grill Double	17		Top Insulation Plate
CF231 Waring Panini Grill Double	18		Top Insulation
CF231 Waring Panini Grill Double	19		Top Element Plate
CF231 Waring Panini Grill Double	20		Hex Head Bolt (4 Required)
CF231 Waring Panini Grill Double	21		Spring Washer (4 Required)
CF231 Waring Panini Grill Double	22		Washer (4 Required)
CF231 Waring Panini Grill Double	23		Fibre Sleeve (2 Required)
CF231 Waring Panini Grill Double	24		Plastic Sleeve (2 Required)
CF231 Waring Panini Grill Double	25		Screw (2 Required)
CF231 Waring Panini Grill Double	26		Washer (2 Required)
CF231 Waring Panini Grill Double	27		Top Element
CF231 Waring Panini Grill Double	28		Ribbed Top Grill Plate
CF231 Waring Panini Grill Double	29		Screw
CF231 Waring Panini Grill Double	30		Tension Screw
CF231 Waring Panini Grill Double	31		Tension Bracket
CF231 Waring Panini Grill Double	32		Screw (4 Required)
CF231 Waring Panini Grill Double	33		Spring Washer (4 Required)
CF231 Waring Panini Grill Double	34		Large Handel Bracket (2 Required)
CF231 Waring Panini Grill Double	35		Ribbed Bottom Grill Plate
CF231 Waring Panini Grill Double	36		Thermostat Bracket
CF231 Waring Panini Grill Double	37		Washer (2 Required)
CF231 Waring Panini Grill Double	38		Screw (2 Required)
CF231 Waring Panini Grill Double	39		Fibre Sleeve (2 Required)
CF231 Waring Panini Grill Double	40		Plastic Sleeve (2 Required)
CF231 Waring Panini Grill Double	41		Screw (2 Required)
CF231 Waring Panini Grill Double	42		Washer (2 Required)
CF231 Waring Panini Grill Double	43		Bottom Element

CF231 Waring Panini Grill Double	44		Bottom Element Plate
CF231 Waring Panini Grill Double	45		Washer (4 Required)
CF231 Waring Panini Grill Double	46		Spring Washer (4 Required)
CF231 Waring Panini Grill Double	47		Hex Head Bolt (4 Required)
CF231 Waring Panini Grill Double	48		Nut
CF231 Waring Panini Grill Double	49		Bottom Insulation
CF231 Waring Panini Grill Double	50		Bottom Insulation Plate
CF231 Waring Panini Grill Double	51		Washer
CF231 Waring Panini Grill Double	52		Nut
CF231 Waring Panini Grill Double	53		Screw (2 Required)
CF231 Waring Panini Grill Double	54		Washer (2 Required)
CF231 Waring Panini Grill Double	55		Rear Cover with Tension Plate
CF231 Waring Panini Grill Double	56		Rear Cover Plate with Tension Holder
CF231 Waring Panini Grill Double	57		Large Handel
CF231 Waring Panini Grill Double	58		Hex Head Screw (2 Required)
CF231 Waring Panini Grill Double	59		Nut (2 Required)
CF231 Waring Panini Grill Double	60		Thermal Cut Off
CF231 Waring Panini Grill Double	61		Washer (2 Required)
CF231 Waring Panini Grill Double	62		Nut (2 Required)
CF231 Waring Panini Grill Double	63		Washer (4 Required)
CF231 Waring Panini Grill Double	64		Spring Washer (4 Required)
CF231 Waring Panini Grill Double	65		Bolt (4 Required)
CF231 Waring Panini Grill Double	66		Wire Tie (7 Required)
CF231 Waring Panini Grill Double	67		Long Red Lead
CF231 Waring Panini Grill Double	68		Long Red Lead & White Lead
CF231 Waring Panini Grill Double	69		Long Black Lead & White Lead
CF231 Waring Panini Grill Double	70		Short Red Lead
CF231 Waring Panini Grill Double	71		Bottom Housing Plate
CF231 Waring Panini Grill Double	72		Screw (4 Required)
CF231 Waring Panini Grill Double	032000		Cleaning Brush
CF231 Waring Panini Grill Double	029824		Short Arm Hex Key
CF231 Waring Panini Grill Double	503320		Ribbed Base assembly
CF231 Waring Panini Grill Double	033053		Coil
CF231 Waring Panini Grill Double	033789		Cord Set