



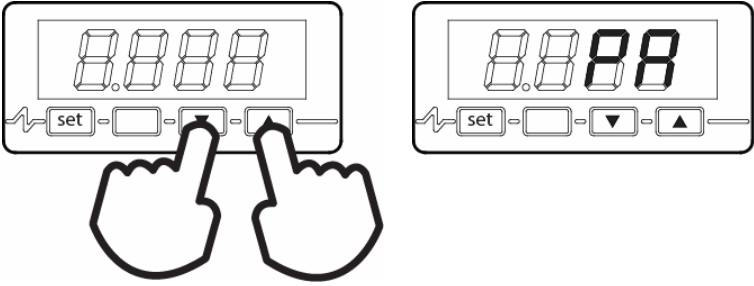


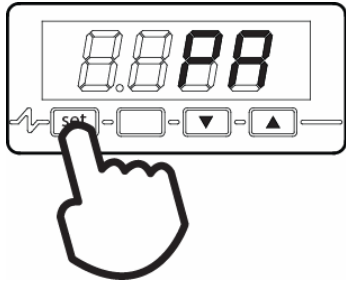




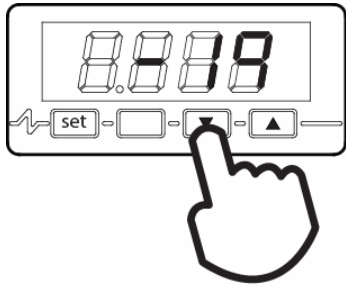


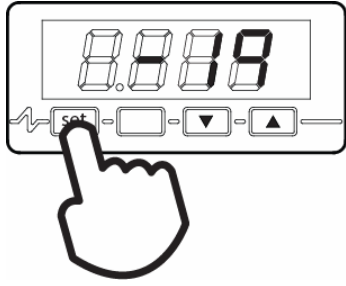




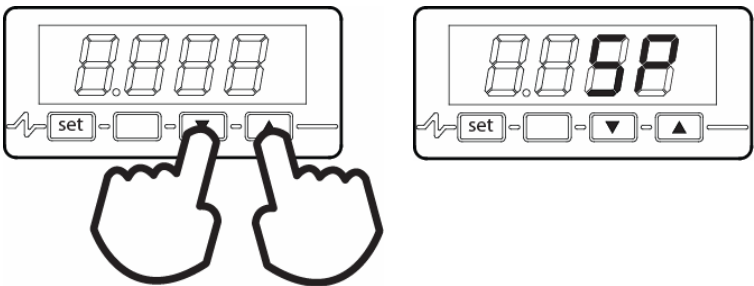


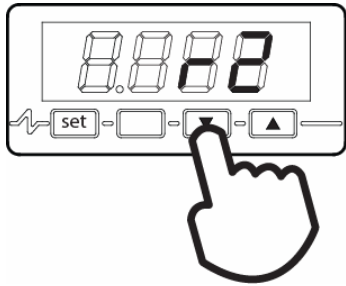


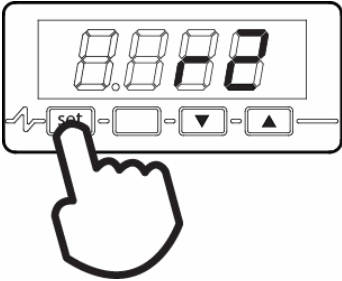




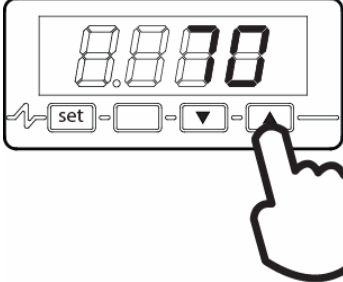


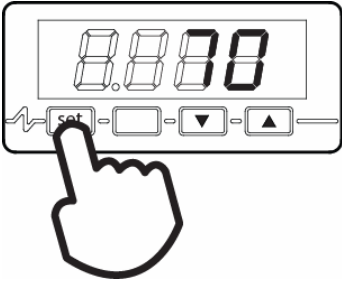




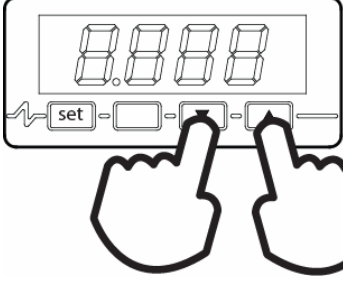


<p>1</p>	<p>Premere  e  contemporaneamente per 4 secondi: compare "PA"</p> <p><i>Press simultaneously  and  for 4 sec.: it appears "PA"</i></p>	
<p>2</p>	<p>Premere </p> <p><i>Press </i></p>	
<p>3</p>	<p>Premere  e  entro 15 sec. per impostare "-19"</p> <p><i>Press simultaneously  and  within 15 sec. to set "-19"</i></p>	
<p>4</p>	<p>Premere </p> <p><i>Press </i></p>	
<p>5</p>	<p>Premere  e  contemporaneamente per 4 secondi: compare "SP"</p> <p><i>Press simultaneously  and  for 4 sec.: it appears "SP"</i></p>	
<p>6</p>	<p>Premere  fino a visualizzare "r2"</p> <p><i>Press  until "r2" appears</i></p>	

7	<p>Premere </p> <p>Press </p>	
8	<p>Premere  e  entro 15 sec. per impostare "70"</p> <p>Press <i>simultaneously</i>  and  within 15 sec. to set "70"</p>	
9	<p>Premere </p> <p>Press </p>	
10	<p>Premere  e  contemporaneamente per 4 secondi o non toccare niente per 60 sec. per uscire dalla procedura</p> <p>Press <i>simultaneously</i>  and  for 4 sec. or do not touch anything for 60 sec. to exit the set-up procedure</p>	
11	<p>Interrompere l'alimentazione dell'apparecchiatura</p> <p>Cut off the power supply of the cabinet</p>	